


A WORLD OF SOLUTIONS

ALL PRODUCTS ARE CE CERTIFIED
AND RoHS COMPLIANT

SMART SOLUTIONS FOR THE LABELING INDUSTRY



MATRIX REMOVER & SLITTER

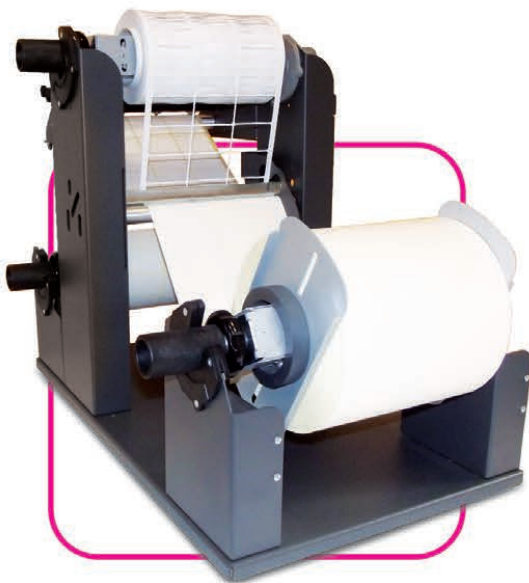


model **MCH251005151S**

Specifics

- 100/240V Power Supply
- Dimensions:
 - Height: 650mm
 - Width: 900mm
 - Depth: 500mm
- 2 Blades Included
- 3" Fixed Core Holders
- Maximum Outside Roll Diameter 250mm
- Maximum Label Width 220mm
- Minimum Slitting Width 25mm
- Manual speed Adjustment
- Label Rewinding Face-Out only

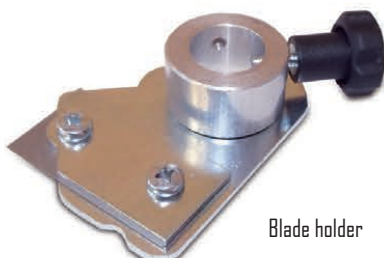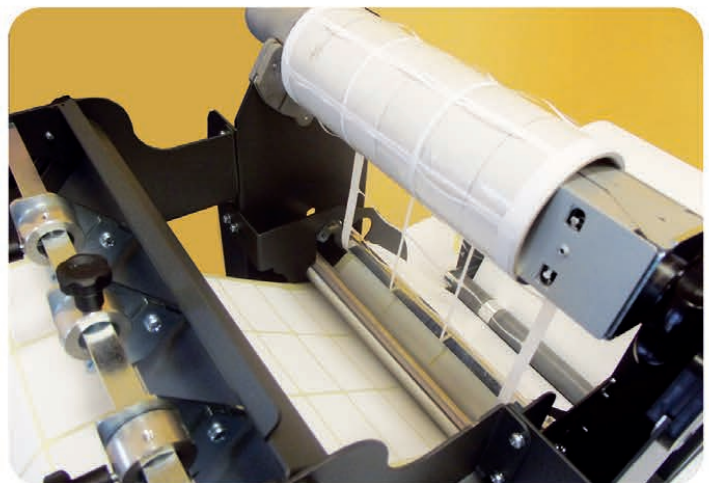

Blade holder

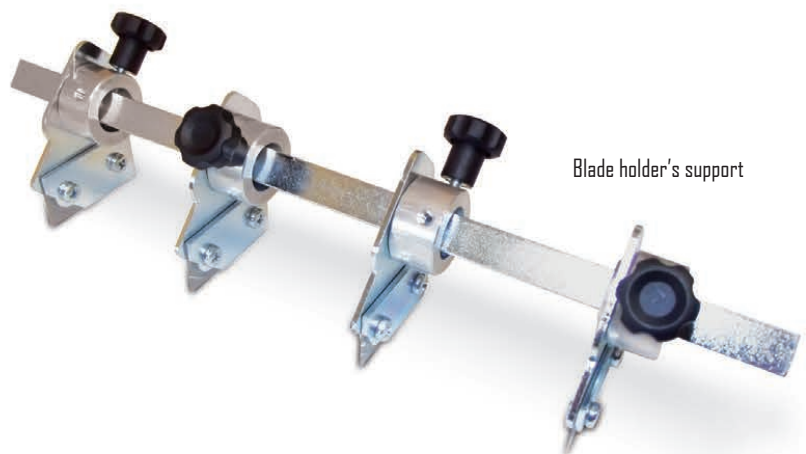

Blade holder's support

This machine can unwind, remove the label matrix from a die cut label roll, slit thanks to one or more cutter blades and rewind onto a 3" motorized core holder rewinder.

The label matrix is the excess label material around each die cut shape where ink or toner may settle after a full bleed printing process.

The machine can also be used only to remove the label matrix or only as slitting system.

The matrix removal and slitting operations are performed simultaneously. It is a specific machine to handle die cut label rolls and ideal for all slitting needs.